




Quick Operating Guide

CJC™ Filter Separator PTU2 27/27

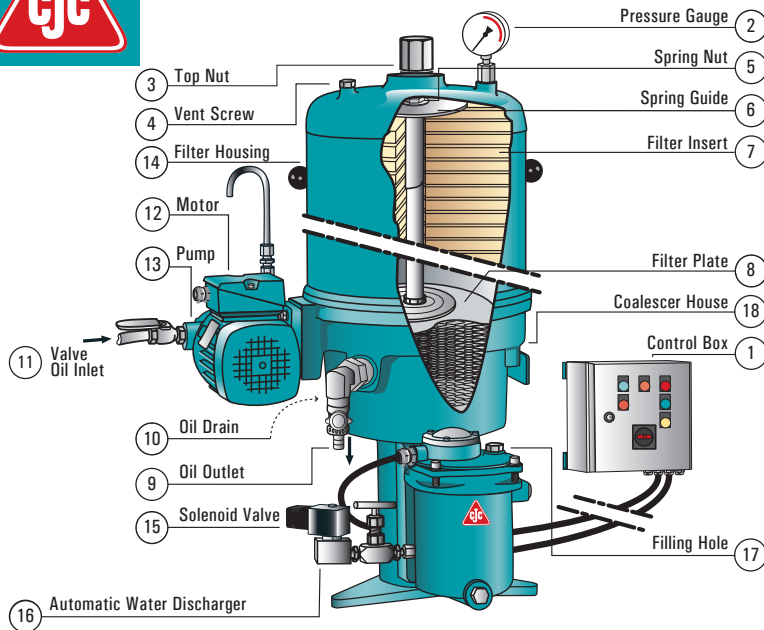

START

- ① Open outlet valve
- ② Open inlet valve
- ③ Secure drain valve is closed
- ④ Start CJC™ Filter
- ⑤ Check rotation direction
- ⑥ Open vent screw until oil appears beneath, then tighten again.
- ⑦ Check starting pressure

STOP

- ① Stop CJC™ Filter

DAILY CHECK

- ① Check filter pressure
- ② Example of acceptable pressure
- ③ At high filter pressure, (under normal temp.) filter insert(s) must be replaced



To avoid leakage, regularly tighten connections.

Be aware that oil spillage is a serious safety risk - keep clean!

26.11.2009